

## LED light P1973 RBG

- The remote control 14 programs following: the each program should be changed after 4 seconds at least by the remote button (A, B, C which any one can control 14 Programs, and A, B, C with the same functions)

1.	red-red green-green cyclical changing
2.	green-green blue-blue cyclical changing
3.	red-red blue-blue cyclical changing
4.	red,green, blue Flash jump+ red, green, blue saltus step
5.	red-green- greenish blue-blue- rossoblu- redgreen-blue- bluish green-red
6.	red-green-blue gradual change
7.	red,green, blue saltus step
8.	purple
9.	cyan
10.	yellow
11.	red
12.	green
13.	blue
14.	white

- The press button controlling 15 Programs as following (the item without remote):  
And each program should be changed no more than 3 seconds. Or the programs change from starting 1<sup>st</sup> program.

Serial number	Effect	Transformation of the mode
1	Red green change	Red >red, green> green > red
2	Blue green change	Green > blue green > blue > green
3	Red blue change	Red>red blue>blue>red
4	Three color rotation	Three kinds of colors are clockwise, by fast to slow, 30 seconds a cycle
5	Three color anti-rotation	Three kinds of colors arer anti-clockwise, by fast to slow, 30 seconds a cycle
6	7 colors change	Green>blue red>blue>red>white>blue green>red green>green
7	7 colors gradual change	Three primary colors will be according to the mode gradually bright gradually destroy; it becomes Colors Of The Rainbow
8	3 colors gradual change	Red, green and blue take turns gradually bright gradually destroy
9	Red	Red light
10	Green	Green light
11	Red green	Red, green light
12	Blue	Blue light
13	Red blue	Red and blue light
14	Blue, green	Blue, green light
15	White	Red, green, and blue light